




1-Gallon Tire Sealant Pump Maintenance

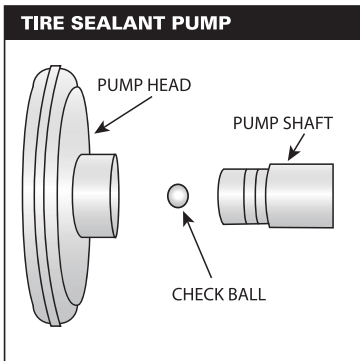

If the pump stops working, it is likely due to a blockage in the pump body; the sealant likes to seal holes!

Follow these steps to clear blockage:

- Carefully remove pump head (**DO NOT LOSE SMALL CHECK BALL**, which will be covered in fibers)
- Clean check ball
- Reinstall check ball
- Reinstall pump head
- Use firm pressure when pumping to minimize clogging

For further instructions call 877-847-1558
or visit www.quadboss.com/tire_sealant.html